

ACTIVE NOISE CANCELING HEADPHONES

ULTRAFOCUS 8000 QUICK FIT GUIDE

WHAT'S IN THE BOX

- One Pair UltraFocus 8000 Active Noise Canceling Headphones
- 1/8" to 1/4" Adaptor
- Nokia® Connection Adaptor
- Skype Adaptor
- Airline Adaptor
- External Attenuator
- Protective Case

Not pictured:


- Shirt Clip
- AAA Batteries (2)
- Quick Fit Guide
- Owner's Manual
- Online Registration



USING THE 3-POSITION CONTROL & MICROPHONE

LOW BATTERY INDICATOR

The battery indicator will shine blue when the battery is fully charged. When the battery needs to be replaced, the indicator will change color, alternating from blue to red.

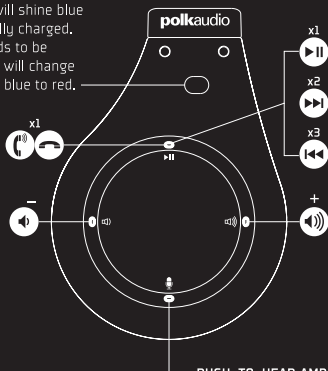

PUSH-TO-HEAR AMBIENT CONTROL
Push to mute your music and amplify outside sounds. Push again to go back to your music.

ACTIVE NOISE CANCELING HEADPHONES

ULTRAFOCUS 8000 QUICK FIT GUIDE

IMPORTANT: When you are using UltraFocus headphones, Active Noise Canceling is on at all times and cannot be turned off. Batteries must be installed for the headphones to deliver sound.

REPLACING THE BATTERIES

The Active Noise Cancellation feature in your Ultra Focus headphones requires two (2) size AAA batteries. To install the batteries:

- 1 To open the battery compartment located on the left ear cup, place fingertips in two depressions and twist cover counterclockwise.
- 2 Insert the batteries; note the correct polarity.
- 3 Close the battery compartment.



IMPORTANT: UltraFocus 8000 headphones have a left a right orientation. They use the letters "L" and "R" to indicate which ear cup goes over which ear.



REPLACING THE EAR CUSHIONS

To remove the ear cushions, hold the ear cup, twist the ear cushion counterclockwise and pull away from the ear cups. Twist and lock the new ear cushions onto the ear cups. You can obtain replacement ear cushions as accessories.

Designed & engineered by Polk Audio at its research facility in Baltimore, MD, USA. Assembled in China. Polk Audio is a DEI Holdings, Inc. Company. Polk Audio & Polk are registered trademarks of Polk Audio, Inc. UltraFocus & Performance Starts Hear are trademarks of Polk Audio, Inc. iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. The remote and mic are supported only by iPod nano (4th generation and later), iPod classic (120GB, 160GB), iPod touch (2nd generation and later), iPhone 3GS, iPhone 4, iPad, and iPad 2. The remote is supported by iPod shuffle (3rd generation and later). Audio is supported by all iPod models. "Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. Nokia is a registered trademark of Nokia Corp.