 


1

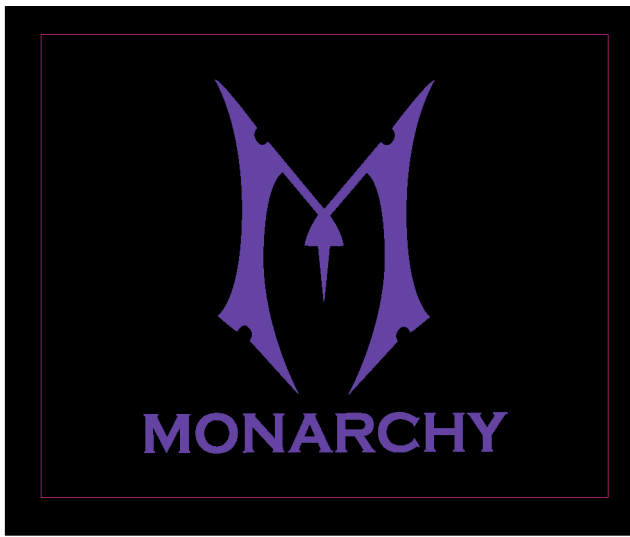

2

#### WARRANTY

Your Monarchy watch limited 1 year warranty covers defects in materials and workmanship for a period of 1 year from the date of purchase. The warranty does not cover the watch case, battery, strap, bracelet, crystal and crown. Damage resulting from improper use, accidents, and normal wear and tear is not covered. Water damage is not covered unless the watch is marked water-resistant. Monarchy's warranty is void if the product is disassembled in any manner by any party other than an in-house Monarchy watch repair representative. If the watch is defective, please call (949) 631-3462 or email monarchywatches@vestalwatch.com for a Return Authorization (RA) number. Watches sent back to us without a Return Authorization (RA) number will not receive service. See below for return address.

#### CARING FOR YOUR WATCH BAND

If your watch band is made of leather, try to avoid getting it wet. Water will ruin the leather. In the event that the leather band is ruined, Monarchy has a limited supply of replacements that can be sold to you. Call the Monarchy warranty department for details (949) 631-3462. If your Monarchy watch is equipped with a stainless steel or PU (poly urethane) band and it has been exposed to salt water, rinse band in fresh water soon after exposure.

#### RETURN ADDRESS

Watch Warranty / Returns - Monarchy watches  
30 W. 17th Street  
Costa Mesa, CA 92627


#### EMAIL

monarchywatches@vestalwatch.com

3

#### BASIC 2 HAND & 3 HAND


##### A) DISPLAY

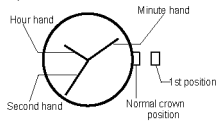

- B) SETTING THE TIME**
1. Pull the crown out to the 1st position.
  2. Turn the crown to set hour and minute hands.
  3. When the crown is pushed back to the normal position, the second hand begins to run.

#### 3 HAND/DATE

##### A) DISPLAY

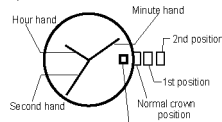

\*Date position may be located at different position depends on models

##### B) SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, the second hand begins to run.

##### C) SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set date.  
\* If the date is set between the hours of 9:00 PM and 1:00 AM, the date may not change the following day.
3. After the date has been set, push the crown back to the normal position.

5

#### D) USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/20(1/1) second unit up to a maximum of 12 hours.

The chronograph 1/20(1/1) second hand keeps continuously for 30 seconds after starting, and then stops at (0) position.

##### Measuring Time with the Chronograph

1. Press button "B" to change the watch to the chronograph mode. The second hand stops at the (0) position, and changes to the chronograph 1/20(1/1) second hand.
2. The chronograph can be started and stopped each time button "A" is pressed (The chronograph 1/20 second hand stops at the 0 second hand position 30 seconds after starting. When button "A" is pressed to stop the chronograph. The chronograph 1/20 second hand advances rapidly to display the measured time).
3. Pressing button "B" resets the chronograph and all hands return to their zero positions.

#### E) CHRONOGRAPH RESET (INCL. AFTER BATTERY REPLACEMENT)

This procedure should be performed when the chronograph second hand and chronograph 1/20(1/1) second hand does not run to the 0 second position after the chronograph has been reset, and including after the battery has been replaced.

1. Pull the crown out to the second position.
2. Press button "A" to set the chronograph second hand to the 0 position.
3. Press button "B" to set the chronograph 1/20 second hand to the 0 position. The chronograph hands can be advanced rapidly by continuously pressing button "A" or "B".
4. Once the hands have been zeroed, reset the time and return the crown to its normal position.
5. Press button "B" to check the chronograph hands are reset to the 0 position.  
\* Do not return crown to normal position while chronograph second hand and 1/20 chronograph second hand return to 12:00 (ZERO) position.

7

#### D) SETTING NORMAL TIME

1. Pull the crown out to the 2nd position, when the second hand reaches the 12 o'clock. Second should stop.
2. Turn crown to set hour and minute hands.  
\* When setting the minute hand, place it 4 to 5 minutes earlier than the time to be set, then turn it back to the correct time.
3. After the time is set, return crown to normal position simultaneously with the time signal. The second hand will start running at the same time

#### BATTERY REPLACEMENT

In most cases, if your watch stops, it's time for battery replacement. Ask a qualified service professional to open the case back. Be sure to ask service professional to conduct a Water Proof Test after servicing. If water damage occurs after replacing battery, warranty can be void.


#### WATER RESISTANCE CHART

Depth	Water Resistant 5Bar (50M)	Water Resistant 3Bar (30M)
Case Back Marking	5 ATM	3 ATM
Light spray, perspiration, light rain, bodily discharge, etc.	OK	OK
Bathing, etc.	OK	NO
Surfing	OK	NO
Water-resistant characteristics	Suitable for swimming but not diving	Suitable for swimming but not diving

8

#### CHRONOGRAPH

##### A) DISPLAY/BUTTONS

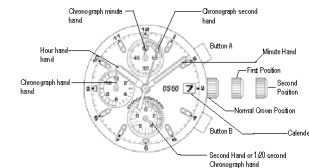

##### B) SETTING THE TIME


1. Pull the crown out to the 2nd position so that the second hand stops at zero.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position in synchronization with a time signal, the small second hand will begin to run.

##### C) SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set the date.  
\* If the date is set between the hours of 9:00 PM and 1:00 AM, the date may not change the following day.
3. After the date has been set, push the crown back to the normal position.

#### MULTIFUNCTION: 2 EYE & 3 EYE

##### A) DISPLAY

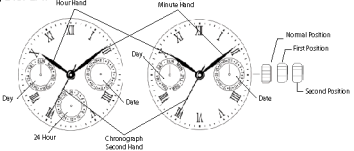

##### B) SETTING THE DAY

1. Pull the crown out to the 2nd position
2. Turn crown clockwise to set day  
\* If the day is set between the hours of 9:00 PM and 1:00 AM, the date may not change the following day.
3. After the date has been set, push the crown back to the normal position.

##### C) SETTING THE DATE (QUICK CHANGE FUNCTION)

1. Pull the crown out to the 1st position.
2. Set the date by rotating the crown counter-clockwise.  
\* If the date is set between the hours of 9:00 PM and 1:00 AM, the date may not change the following day.
3. After the date has been set, push the crown back to the normal position.

MONARCHY c/o RW Timing,  
730 W. 17th Street  
Costa Mesa, CA 92627  
(949) 631-3462  
monarchywatches@vestalwatch.com