


# How zBoost For Home & Office Works

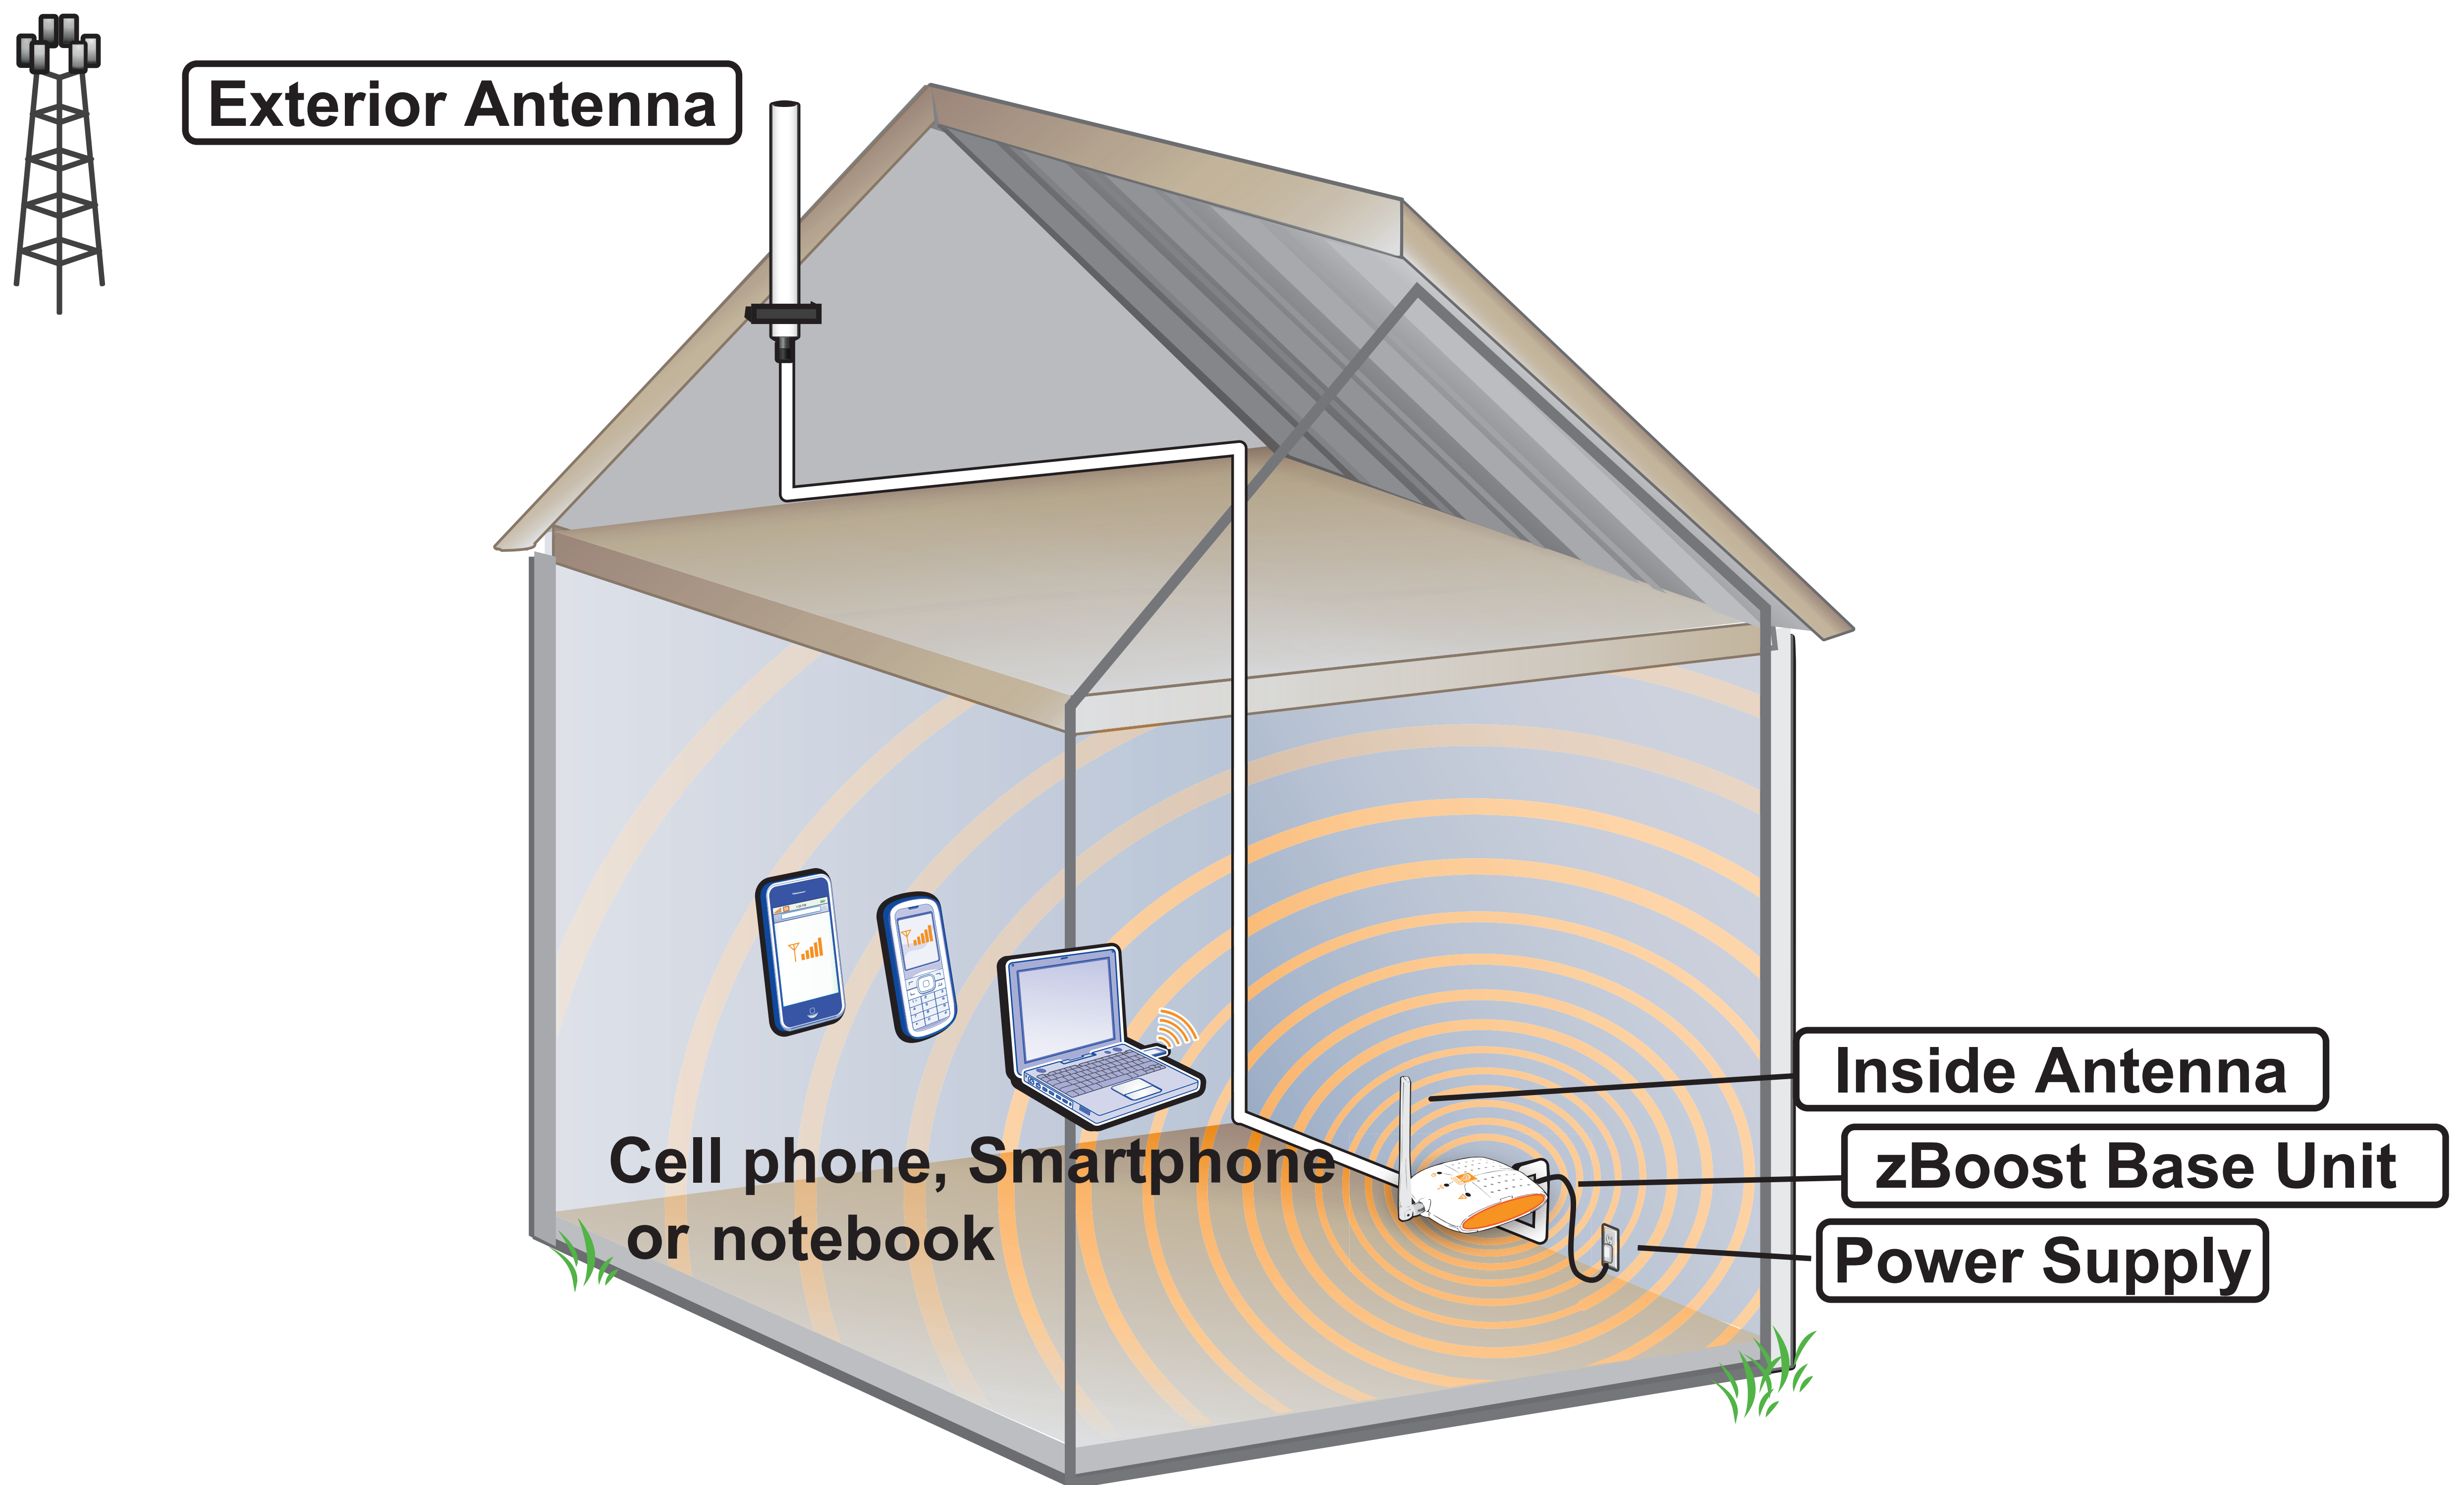

1. Position Exterior Antenna in area of best signal - on the roof or in the attic
2. Place zBoost Base Unit in home where signal is needed
3. Run coaxial cable from the Exterior Antenna to the Base Unit & plug it in