

Digital Photo Frame User's Manual



Questions? Need some help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



Or visit
www.polaroid.com/support.

Controls and Basic Instructions


CONGRATULATIONS on your purchase of a Polaroid digital photo frame. Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage to the device. Also, remember to keep this User's Manual in a convenient location for future reference.

Important: Save the original box and all packing material for future shipping needs.

Controls



Inserting a Memory Card

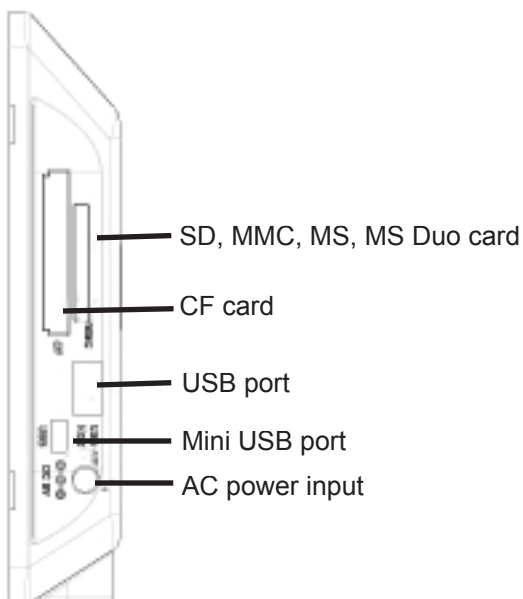

1. Find the slot that fits your memory card.
2. Insert the card in the correct slot.
3. To remove the card, simply push it in slightly until it springs back out. Remove.

Note: Do not remove any memory card from its slot while pictures are playing. Doing so could damage the frame or memory card. Always turn the power off before removing the memory card.

Battery Instructions and Remote Control

Replacing the Remote Control Battery


1. Remove the battery compartment by pulling the cover in the direction of the arrow.
2. Remove old battery and dispose of correctly.
3. Insert new battery taking note of correct polarity (+/-).
4. Replace cover.

Caution:

1. Only use a 3V CR2025 battery.
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the battery when not using the Flash Player for prolonged periods.



Buttons on the Remote Control

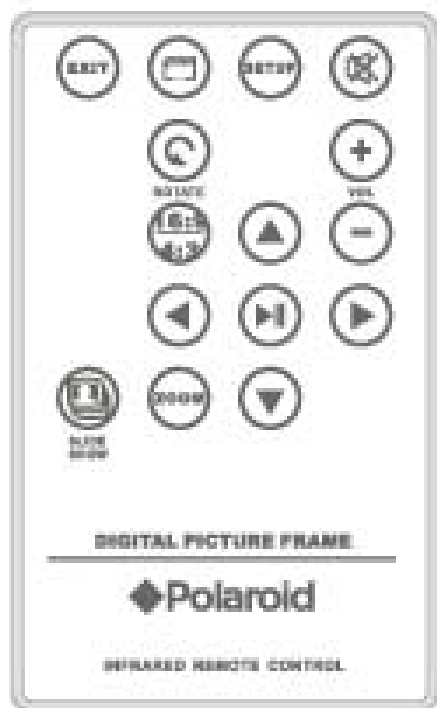

	EXIT Press to exit a photo slide show or video/music files
	CARD SELECT button Press to choose a different memory card
	SETUP button Press to open menu for changing settings
	MUTE Press to mute the audio
	ROTATE Press to rotate photos 90 degrees clockwise on screen*
	VOLUME + Press to increase volume
	ASPECT RATIO Press to toggle from 4:3 to 16:9*
	UP Press to move up when selecting files
	VOLUME - Press to decrease volume
	LEFT Press to move left when selecting files
	ENTER/PLAY/PAUSE Press to confirm selections, play, or pause
	RIGHT Press to move right when selecting files
	SLIDESHOW Press to start a photo slideshow
	ZOOM Press to zoom up to 4x
	DOWN Press to move down when selecting files
*Non-functional in slideshow mode	

Controls and Basic Instructions

On-screen Menu	Sub-Menus	Description
Language		Select the language of your choice: English, Italian, German, French, Spanish, Portuguese, Dutch, Polish, Czech, Russian, Swedish, Finnish, Greek, Turkish, Arabic
Display image size	Original	Shows your images as full frame or original size
	Optimal	
Slideshow transition	Normal	Each picture in a slide show will be shown one after another. Choose a transition to be used between those images
	Random	
	Fade	
	Curtain	
	Open-door	
	Cross-comb	
Slideshow speed	Fast	5 seconds
	Normal	15 seconds
	Slow	30 seconds
Slideshow music	On	Add music to your slideshow
	Off	
Slideshow shuffle	On	Display photos in random order
	Off	
Video repeat	Repeat single	Allows you to repeat video
	Repeat all	
	No repeat	
Music repeat	Repeat single	Allows you to repeat songs
	Repeat all	
	No repeat	
Power Saving	2 hours	Automatically turns the photo frame off after a selected period of time
	4 hours	
	8 hours	
	No power saving	
Factory default	Cancel	Resets all your settings back to the factory default
	OK	
Version number		Factory software version

Changing the Language

1. Press the "SETUP" button to enter the setup mode
2. Press "UP" or "DOWN" to select the setup function and press "ENTER".
3. Press "UP" or "DOWN" to select "LANGUAGE" and press "ENTER".
4. Select your language and press "ENTER".

Setting Up the Photo Frame

Powering up the Digital Photo Frame

1. Plug the appropriate end of the AC adapter into a power outlet and the other end into the Digital photo frame.
2. After you've stored content on a memory card (not included), insert the card into the proper slot (see page 2).
3. Turn the power switch to "ON". Once the unit has been turned on, the unit will enter the source mode automatically.

Using a Memory Card


1. Insert your memory card into one of the open ports (see page 2).
2. If there are any photos on the memory card, a slide show will automatically begin in approximately 30 seconds.
3. It is recommended that you turn off your USB device and the Digital photo frame before connecting the USB device.

NOTE: DO NOT TAKE THE MEMORY CARD OUT OF THE SLOT WHILE THE PICTURES ARE STILL PLAYING OR WHEN THE POWER IS STILL ON. THIS COULD DAMAGE THE FRAME OR THE MEMORY CARD. ALWAYS TURN THE POWER OFF BEFORE REMOVING THE MEMORY CARD.

**FOR
PLACEMENT
ONLY**

Selecting a Mode

1. Press "LEFT" or "RIGHT" to choose a mode.
2. Select photo, music, or video, then press "ENTER" to show available files.
3. Select "FILE" mode, then press "ENTER" to view all available files on your memory card or USB device.
4. Select "TIME" mode, then press "ENTER" to view the calendar and clock.
5. Select "SETUP" mode, then press "ENTER" to setup slideshows, change languages, etc.

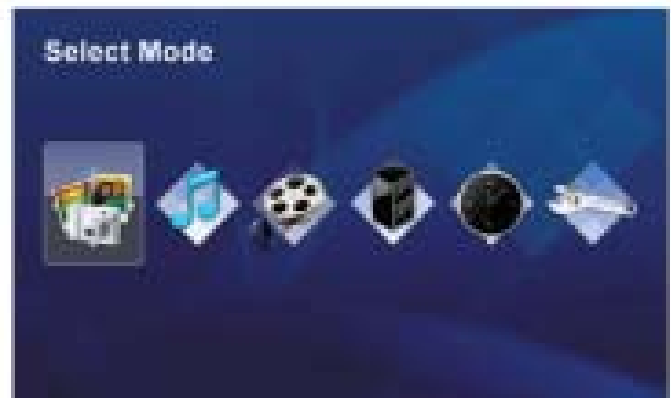

Setup Mode

1. Press the "SETUP" button to enter the setup mode.
2. Press "UP" or "DOWN" to select the setup function and press "ENTER".
3. Press "UP" or "DOWN" to select your choice and press "ENTER".



Navigating in the Digital Photo Frame

Connecting a USB Device to the Digital Photo Frame

1. The Digital photo frame has a built-in mini-USB port. If you would like to connect the USB device (such as a USB flash drive) to the Digital photo frame with a full-size port, please use the included USB Connection Cable. This included cable has a male mini-size USB port and a female full-size USB port.
2. It is recommended that you turn off your USB device and the Digital photo frame before connecting the USB device.


NOTE: DO NOT TAKE THE MEMORY CARD OUT OF THE SLOT WHILE THE PICTURES ARE STILL PLAYING OR WHEN THE POWER IS STILL ON. THIS COULD DAMAGE THE FRAME OR THE MEMORY CARD. ALWAYS TURN THE POWER OFF BEFORE REMOVING THE MEMORY CARD.

Connecting a USB flash drive to your Photo Frame

1. Your Digital photo frame will recognize a USB flash drive the same way it sees your flash memory cards.

Multi-Photo Preview Mode:

1. Press “UP”, “DOWN”, “LEFT”, or “RIGHT” to select a photo and press “ENTER”.
2. Press “RIGHT” to go to the next picture. Press “LEFT” to go back to the previous picture.
3. When viewing a picture, press “ZOOM” to enlarge.
4. While in zoom mode, use the “UP”, “DOWN”, “LEFT”, and “RIGHT” buttons to move the picture.
5. While in full screen mode, press the “ROTATE” button to rotate the picture.
6. While in full screen mode, press the “SETUP” button to enter the setup menu.
7. While in photo mode, press the “ENTER” button to start a slide show. Press “ENTER” again to pause.
8. While in photo mode, press the “16:9/4/3” button to select your aspect ratio

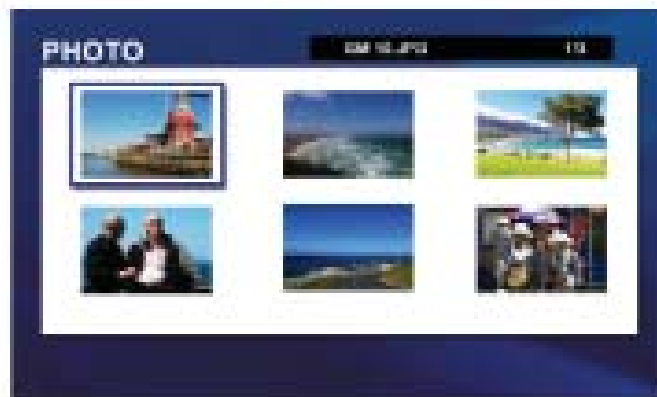

Navigating in the Digital Photo Frame

Viewing Music or Video Files

1. Press "UP" or "DOWN" to select a music or video file.
2. Press "ENTER" to play the selected file.
3. Press "ENTER" to pause, once again to resume.
4. Press "EXIT" to pause when.
5. Press "+" or "-" to adjust the volume.
6. While music or video is playing, press "UP" to play previous file, press "DOWN" to play the file.

File Browser

1. Press "UP" or "DOWN" to select files or a directory.
2. Press "ENTER" to play the selected file.
3. Press "ENTER" or "RIGHT" button to enter a sub-directory.
4. Press "EXIT" or "LEFT" to return to a previous menu.
5. Press "RIGHT" or "LEFT" to mark a file.
6. Press "SETUP" to show the "COPY" or "DELETE" operation menu.

Calendar Mode

1. Press "UP" or "DOWN" to change the month.
2. Press "SETUP" to show the setup menu.
3. While in the setup menu, select "SET CLOCK". Press "RIGHT" to set the correct time. Use the "RIGHT" and "LEFT" arrows to move from the "DATE" and "TIME".
4. While in the setup menu, select "SET ALARM". Press "RIGHT" to set the correct time. Use the "RIGHT" and "LEFT" arrows to move from the "DATE", "TIME", "ALARM SOUND" and "ALARM OCCURENCE".
5. While in the setup menu, select "SLIDESHOW PHOTO" to turn on/off slide show in calendar mode.



Working with a PC

Connecting to your PC

1. Plug in the Digital photo frame.
2. Connect the small end of the USB cable to the USB port on the side of the Digital photo frame.
3. Connect the larger end of the USB cable to an open USB port on your PC.
4. Open “My Computer” on your desktop.
5. All flash cards currently in the Digital Photo Frame, as well as the frame’s built-in memory, will be listed as “Removable Disk” on your PC.
6. Double-click the desired drive (memory card) to display the files on that drive.
7. Click and drag to copy photo, video, or music files to and from the card and your PC. Most photos are stored in the Windows “My Pictures” folder on your PC, unless you’ve moved them somewhere else.

NOTE: If your PC is connected to a LAN (Local Area Network), or if you have multiple drive letters already assigned to peripheral devices, you will need to manage your drive settings in Windows to free up the four drive letters immediately following your CD-ROM drive so the Digital photo frame can correctly assign them to memory card slots.

Disconnecting to your PC

NOTE: Never simply unplug the Digital photo frame from your PC as it can seriously damage the memory in your digital photo frame and/or your PC. You must “**SAFELY REMOVE HARDWARE**”.

1. Open “My Computer” on your desktop.
2. Select the Digital photo Frame drive by right clicking on its icon.
3. Select “Eject” to disconnect the Digital photo Frame from your PC.
4. You should receive a message stating it is safe to disconnect the Digital photo frame from your PC. Once you receive that message, disconnect the USB cord from your Digital photo Frame to your PC.

Frequently Asked Questions

Q: Why are display times faster with some pictures than others?

A. While higher resolution images are clearer than low resolution images, they are larger files and tend to load slower than smaller files.

Q: I set up my Digital Photo Frame but it won't turn on. Why?

A. Make sure the AC adapter is securely connected to the Digital photo frame, and the power switch is set to "ON"

Q: I have a flash card in the Digital Photo Frame but I can't view any of my photos. Why?

A: First make sure your memory card is one of the recognized formats and that the files on the card are JPEG images files. Second, turn the Digital photo frame off and make sure your flash card is inserted all the way into the card slot and is facing the correct direction. Third, turn the frame on. After a couple of seconds, you should see your first photos. Press "EXIT" to open the card selection screen and select the card you wish to view. Then select "PHOTOS". You should see thumbnails of all the photos on the card.

NOTE: Some digital cameras save images in formats other than JPEG. Refer to your camera's manual if your photos are not JPEG files.

Q: Can I insert multiple flash cards at the same time?

A. Yes. Simply turn on the unit before inserting any cards. The card selection screen lets you choose between all available flash cards.

Q: Does the Digital Photo Frame support all JPEG and Motion JPEG files?

A. No, it supports JPEG and Motion files taken from a digital camera. The Digital photo frame may not read all images or video files downloaded from the Internet or from other software graphic applications.

Specifications and Recycling

Unit	8" Digital Photo Frame
Resolution	800 x 480
Contrast Ratio	500:1
Card Type	SD, MMC, CF, MS, MS Duo, MS Pro, MS Pro Duo
Input	Mini USB

Questions? Need some help?

Call our help line found on the insert with this icon:



Or visit www.polaroid.com.



RoHS

WEEE:

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to www.polaroid.com and click on "Company" or call the customer service number for your country listed in the instruction manual.

"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation.

For service, support and warranty information, visit www.polaroid.com.