

M-N

S-T

MOTOROLA	MTV 3.3	✓	NOKIA	5300	✓
MOTOROLA	E1000	✓	NOKIA	5310	✓
MOTOROLA	E770v	X	NOKIA	5500	✓
MOTOROLA	K1	✓	NOKIA	5610	✓
MOTOROLA	KRZR K3	✓	NOKIA	5700	✓
MOTOROLA	L6	✓	NOKIA	6070	X
MOTOROLA	L7	X	NOKIA	6085	✓
MOTOROLA	L7e	✓	NOKIA	6103	✓
MOTOROLA	L9	✓	NOKIA	6110 / 6111	✓
MOTOROLA	Q9	✓	NOKIA	6120 / 6125	✓
MOTOROLA	RAZR 2 V8	X	NOKIA	6131 / 6151	✓
MOTOROLA	RAZR 2 V9	✓	NOKIA	6233 / 6234	✓
MOTOROLA	ROKR	X	NOKIA	6260 / 6270	✓
MOTOROLA	U9	✓	NOKIA	6280 / 6290	✓
MOTOROLA	V1075	✓	NOKIA	6301	✓
MOTOROLA	V360v	✓	NOKIA	6555	✓
MOTOROLA	V500 / V550 / V551	✓	NOKIA	6600	✓
MOTOROLA	V600	✓	NOKIA	6630	✓
MOTOROLA	Z6 / Z8	✓	NOKIA	6670	✓
NOKIA	3250	✓	NOKIA	6680 / 6681	✓
NOKIA	5200	✓	NOKIA	7370	✓

SONY ERICSSON	K510i / K530i	✓	SONY ERICSSON	W890i	✓
SONY ERICSSON	K550i	✓	SONY ERICSSON	W900i / W910i	✓
SONY ERICSSON	K600i / K608i	✓	SONY ERICSSON	W960i / W980	✓
SONY ERICSSON	K700i	✓	SONY ERICSSON	W990i	✓
SONY ERICSSON	K750i / K770i	✓	SONY ERICSSON	Z310i	✓
SONY ERICSSON	K810i / K850i	✓	SONY ERICSSON	Z530i	✓
SONY ERICSSON	P1i	✓	SONY ERICSSON	Z550i / Z555i	✓
SONY ERICSSON	P900	✓	SONY ERICSSON	Z610i	✓
SONY ERICSSON	S700i	✓	SPV	C100	X
SONY ERICSSON	T280i	✓	SPV	C200	✓
SONY ERICSSON	V600i / V630i	✓	SPV	C600	X
SONY ERICSSON	V800	✓	SPV	M3100	✓
SONY ERICSSON	W300i / W380i	✓	SPV	M600	✓
SONY ERICSSON	W350i	✓	TOSHIBA	t803	✓
SONY ERICSSON	W550i	✓	TOSHIBA	TS608	✓
SONY ERICSSON	W580i	✓	TOSHIBA	TS705	X
SONY ERICSSON	W610i	✓			
SONY ERICSSON	W660i	✓			
SONY ERICSSON	W700i / W710i	✓			
SONY ERICSSON	W800i / W810i	✓			
SONY ERICSSON	W850i / W880i	✓			

✓ Compatible with Polaroid Pogo™ printer
 X Not compatible with Polaroid Pogo™ printer

For more information:
www.polaroid.com/pogo

Information correct at time of going to print:
 October 2008

Phone Compatibility



A-M

N-S

S-S



AIRNESS	MK99	✓	LG	KE800	✓
ALCATEL	OTC550	X	LG	KF600	✓
ALCATEL	OTC825	X	LG	KG240	✓
ALCATEL	OTS853	X	LG	KG320	✓
ALCATEL	OTS920	✓	LG	KG800 / KG810	✓
ASUS	P525 / P535	X	LG	KP230	✓
BENQ	S82	X	LG	KS20	✓
BENQSIEMENS	S68	X	LG	KU311	X
BLACKBERRY	8100 / Pearl 8110	✓	LG	KU380	X
BLACKBERRY	8120	✓	LG	KU580	X
BLACKBERRY	8700	X	LG	KU730	X
HP	6915	X	LG	KU800	X
HTC	P3600	✓	LG	KU970 / KU990	X
HTC	Touch Cruise P3650	✓	LG	M6100	✓
HTC	Touch Dual P5500	✓	LG	P7200	✓
HTC	P3300	✓	LG	Prada	✓
HTC	Touch P3400	✓	LG	S5200	✓
HTC	Touch P3450	X	LG	U8210	✓
HTC	TYTN II	✓	LG	U8290	✓
LG	F2400	X	LG	U8500	✓
LG	KE500 / KE520	✓	LG	Viewty	X

NOKIA	7373	✓			
NOKIA	7390	✓			
NOKIA	6500c / 6500s	✓			
NOKIA	N78	✓			
NOKIA	N81-8GB	✓			
PALM	Treo 500	✓			
PALM	Treo 750v	✓			
QTEK	8020	X			
QTEK	8300	✓			
QTEK	S200	✓			
SAGEM	My401z / My501x	✓			
SAGEM	My721x	✓			
SAGEM	My730C / My810X	X			
SAGEM	My850c Carat	X			
SAGEM	MyW7	X			
SAGEM	RG512	✓			
SAMSUNG	D500E	✓			
SAMSUNG	D600	✓			
SAMSUNG	D600E	✓			
SAMSUNG	D720 / D730	✓			
SAMSUNG	D800 / D820	✓			

SAMSUNG	D830 / D840	✓
SAMSUNG	D900 / D900i	✓
SAMSUNG	E250	✓
SAMSUNG	E350E	X
SAMSUNG	E360e / E370	✓
SAMSUNG	E530 / E570	✓
SAMSUNG	E620	✓
SAMSUNG	E720 / E740	✓
SAMSUNG	E770 / E780 / E790	✓
SAMSUNG	E840 / E860v	✓
SAMSUNG	E880	✓
SAMSUNG	E900 / E950	✓
SAMSUNG	F110	✓
SAMSUNG	F250	✓
SAMSUNG	F330	✓
SAMSUNG	F700V	✓
SAMSUNG	G600 / G800	✓
SAMSUNG	i320 / i450	✓
SAMSUNG	i560v	✓
SAMSUNG	i600 / i620	✓
SAMSUNG	i710 / i780	✓

SAMSUNG	J600	✓
SAMSUNG	J750	✓
SAMSUNG	L170	✓
SAMSUNG	L760	✓
SAMSUNG	M110	✓
SAMSUNG	M610	✓
SAMSUNG	P180	✓
SAMSUNG	P260	✓
SAMSUNG	P300 / P310	✓
SAMSUNG	P910	✓
SAMSUNG	U700 / U900	✓
SAMSUNG	X660	X
SAMSUNG	Z140v	✓
SAMSUNG	Z150 / Z170	✓
SAMSUNG	Z230	✓
SAMSUNG	Z240E	✓
SAMSUNG	Z300	X
SAMSUNG	Z310 / Z360	✓
SAMSUNG	Z400	✓
SAMSUNG	Z510 / Z540	✓
SAMSUNG	Z560 / Z560v	✓

SAMSUNG	Z630	✓
SAMSUNG	Z720	✓
SAMSUNG	ZV10	✓
SAMSUNG	ZV30	X
SAMSUNG	ZV40	✓
SANYO	S750i	✓
SHARP	550SH	✓
SHARP	703SH	✓
SHARP	902SH	✓
SHARP	903SH	✓
SHARP	GX15 / GX17	X
SHARP	GX25 / GX29	X
SHARP	GX30	X
SHARP	S770SH	✓
SHARP	S903SH	✓
SIEMENS	SXG75	✓
SONY ERICSSON	C702i	✓
SONY ERICSSON	C902	✓
SONY ERICSSON	G700	✓
SONY ERICSSON	G900i	✓
SONY ERICSSON	K320i	✓