
TOMMY BAHAMA
RELAX

Tommy Bahama, the purveyors of “Island Lifestyles”, brings you a new collection of spirited casual sport watches that appeal to those who believe the philosophy that

***LIFE IS A GAME, PLAY IT WELL.***

## LIMITED LIFETIME WARRANTY

Thank you for choosing a Tommy Bahama Relax precision timepiece. This Tommy Bahama Relax Watch is warranted to you, the owner for your lifetime against all defects in material or workmanship.

The warranty does not apply to normal wear and tear or abuse and excludes battery, case, crystal, strap, malfunction and deterioration resulting from accident, negligence and tampering. Tommy Bahama Relax Watches are water-resistant. Special gasket and crown protectors have been used in the creation of these time pieces to ensure their resistance to water. In the event of a defect or malfunction, it will be repaired or replaced at our option. PLEASE DO NOT SEND CASH. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted such as battery, case, crystal, strap. In this event, please see Watch Repair section in the back of this booklet.

## 100% STAINLESS STEEL

Tommy Bahama Relax Watches are made from 100% Solid Stainless Steel. Stainless Steel is:

- The most durable materials with which to construct a watch case & bracelet
- 100% hypoallergenic

## TIME AND DATE SETTING

Do not set / adjust date nor turn hour / minute hands counter clockwise between the hours of 8 PM and 3 AM.
Between these times the gears are too close together, therefore, doing so could cause damage to your watch.

## TEMPERATURE

Your watch works with stable accuracy between a temperature range of 41F and 95F (5C and 35C).

## BATTERY LIFE

The battery in your Tommy Bahama Relax Watch should last approximately 2 years. When the battery expires, replace it as soon as possible to prevent any malfunction. For battery replacement, we recommend that you contact an AUTHORIZED TOMMY BAHAMA RELAX DEALER, Battery type is found on the caseback.

## WATER RESISTANCE


- Before using watch in or near water, be sure that crown is pushed in completely.
- If watch is underwater or wet, do not use pushers, rotating bezels or crowns.
- If watch becomes wet, wipe it dry as soon as possible.
- If watch comes in contact with salt water, rise case and bracelet immediately and thoroughly.
- Do not take your watch into a Hot Tub or Sauna. Extreme heat and pressure may cause your watch to lose its water resistance.
- Water resistance is not permanent. In the course of time, as your case becomes worn, the water resistance of the watch may decrease.

| WATER | SUITABLE |
|---|---|
| 30 M / Or Watch Simply Marked Water Resistance | Washing Hands, Showering |
| 50 Meters | Light Swimming |
| 100 Meters | Most Water Sports - But Not Deep Water Diving |



## 3-HAND DATE MODELS

Includes all models with an hour, minute and second hand and date at 3:00, 4:00 or 6:00

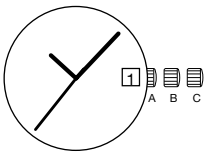


1. Calendar

### To Set the TIME:


1. Pull out crown to second click position “C”.
2. Turn crown counter clockwise to correct time.
3. Push in crown to “A” position to set.

### To Set the DATE:

1. Pull out crown to second click position “C”.
2. Turn crown counter-clockwise to correct date.
3. Push in crown to “A” position to set.

## TWO EYES MULTI-FUNCTION MODELS

1. Sweep Hand
2. Day Hand
3. Date Hand

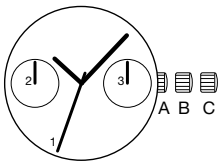


### To Set the DAY:

Set the day before setting the time.

1. Pull out the crown to second click position “C”.
2. Set the date by rotating the crown forward (to rotate the hour and minute hands clockwise).
   *If the day is set by rotating the crown backward (rotating the hour and minute hands counter-clockwise), the date will not be changed.
   Note: The day is changed during the period from about 12:00 AM to about 5:30 AM.
3. Push in crown to “A” position to set.

### To Set the TIME:

1. Pull the crown out to the second click position “C” when the second hand reaches the 12 o’clock position so that the second hand stops there.
2. Set the hour and minute hands.
*When setting the minute hand, adjust it to 4-5 minutes earlier than the time to be set, and then turn it back to the correct time.
Note: The day is changed during the period from about 12:00 AM to about 5:30 AM.
3. After the time is set, push the crown back to the “A” position. The second hand will start running at the same time.


### To Set the DATE (Quick change function):

1. Pull the crown out to the first click position “B”.
2. Set the date by rotating the crown backward (counter clockwise).
*The date must be set only at certain times. If the date is set between 9:00 PM and 12:00 AM, the date will not change correctly.
3. Push in crown to “A” position to set.

MULTI-FUNCTION

## TWO EYES MULTI-FUNCTION MODELS

1. Second Hand
2. Date Hand
3. 24 Hour Hand

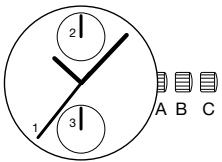


### To Set the TIME:

1. Pull the crown out to the second click position “C” when the second hand reaches the 12 o’clock position so that the second hand stops there.
2. Then set the hour and minute hands.
   *When setting the minute hand, adjust it to 4-5 minutes earlier than the time to be set, and then turn it back to the correct time.

Note: The day is changed during the period from about 12:00 AM to about 5:30 AM.

3. After the time is set, push the crown back to the “A” position. The second hand will start running at the same time.

### To Set the DATE (Quick change function):


1. Pull the crown out to the first click position “B”.
2. Set the date by rotating the crown backward (counter clockwise).

*The date must be set only at certain times. If the date is set between 9:00 PM and 12:00 AM, the date will not change correctly.

3. Push the crown back to normal position “A”.

MULTI-FUNCTION

## CHRONOGRAPH MODELS WITH 6/9/12 EYES

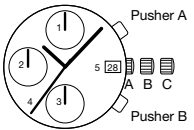


1. Chronograph Minute
2. Chronograph Hour
3. Time Second Hand
4. Chronograph Hand 1/5 Second
5. Calendar (Select models)

- This chronograph watch has TIME, DATE and CHRONOGRAPH functions.
- The top eye (minutes) measures chronograph minutes, up to maximum of 60 minutes.
- The left eye (hours) measures chronograph hours, up to 12 hours. It also shows measurement of Lap Time.
- The bottom eye (seconds) displays time seconds.
- Sweep second hand measures chronograph seconds, up to 60 seconds.

### To Set the TIME:

1. Pull out crown to second click position “C”.
2. Sweeping second will turn and stop at “60” or 12 o’clock position.
3. Turn crown counter clockwise to correct time.
4. Push in crown to “A” position to set.

### To Set the DATE: (Select models)

1. Pull out crown to first click position “B”.
2. Turn crown clockwise to correct date.
3. Push in crown to “A” position to set.

### CHRONOGRAPH

The chronograph can measure up to 12 hours, 59 minutes and 59 seconds. Before using, ensure that both 12:00 and 9:00 eyes are at zero/12 o’clock position or “60” and “12” respectively. If not, press Pusher B to Reset.

### To Use the CHRONOGRAPH:

1. Press Pusher A to Start.
2. Press Pusher A to Stop.
3. Press Pusher A to Restart.
4. Press Pusher B to Reset to zero.

When the chronograph measurement is within one minute.

1. The sweeping second hand indicates the seconds up to 59 chrono seconds.

When the chronograph measurement exceeds 1 minute.


1. The 12 o’clock eye hand indicates minutes up to 59 chrono minutes.
2. The 9 o’clock eye hand indicates minutes up to 12 chrono hours.

*IMPORTANT*

To conserve the battery life: Make sure that chronograph is reset to zero when not in use.

CHRONOGRAPH

## ANALOG-DIGITAL
## 3 HANDS W/ DIGITAL WINDOW

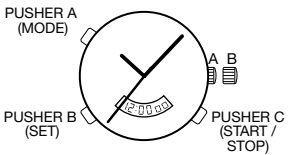


### To Set The ANALOG TIME:
Pull the crown out to position B. Rotate the crown clockwise or counterclockwise to set the hands to the desired time.
Push in crown to "A" position to set.

### To Set The DIGITAL TIME AND CALENDAR:
1. Press Pusher "A" to select the current time mode.
2. Press Pusher "B" for about 2 seconds until the seconds start flashing.
3. Pressing Pusher "C" will now reset the seconds to 00.
4. Press Pusher "B" again until the minutes start flashing. Now press Pusher "C" to advance the minutes.
5. Press Pusher "B" again to set the hours. Hold until the hours start flashing. Now press Pusher "C" to advance the hours.
6. Press Pusher "B" to select the current calendar mode.
7. Press Pusher "B" again until the months start flashing. Now press Pusher "C" to advance the months.
8. Press Pusher "B" until the days start flashing. Now press Pusher "C" to advance the days.
9. At this point you can select the 12 or 24 hour format by pressing Pusher "B" again and then pressing Pusher "C" to toggle between formats.

### To Set The ALARM:
1. Press Pusher "A" to select the current calendar mode.
2. Press Pusher "B" and hold for about 2 seconds until the hours start flashing on the alarm time. Now press Pusher "C" to advance the hours.
3. Press Pusher "B" again until the minutes start flashing. Now Press Pusher "C" to advance the minutes.
4. Press Pusher "B" again to lock in the alarm time.
5. Pressing Pusher "C" after the alarm time is locked in will activate the alarm or turn it off as indicated by the letter "A" on the left of the display.

### To Use The STOPWATCH:
To use the stopwatch, press Pusher "A" to enter the stopwatch mode. Press Pusher "C" to start the timing. Press Pusher "C" again to stop the timing. To clear the stopwatch, press Pusher "B".

ANALOG-DIGITAL

**ANALOG-DIGITAL**
**3 HANDS W/ DIGITAL WINDOW**
**WORLD TIME**

ANALOG-DIGITAL

## WATCH REPAIR AND SERVICE

Please visit www.genevawatchgroup.com
for instructions and cost of repair service.

Geveva Watch Group
47-50 33rd Street
Long Island City, NY 11101
Tel: (800) 874-0907

**LIFE IS A GAME, PLAY IT WELL.**

RLXWR1